BULB

Should you find it necessary to replace the bulb, pry the old one loose with a pencil or other like object and replace with same type, or a G.E. #246, available in most stores.

IF THE PROJECTED PICTURE IS NOT BRIGHT,

the LAMP may need focusing. If the beam does not cover the WINDOW entirely, rotate the LAMP by turning it with your finger, or a pencil's eraser. If the lamp does not turn, lift it out of the projector, rotate it slightly, and replace it between the METAL PRONGS.

You may use back of box for screen.

FILMS AVAILABLE:

2506/7 . . . DONALD DUCK/SNOW WHITE

2511/12 . . . MICKEY MOUSE/PINOCCHIO

2516/17 . . . GOOFY/101 DALMATIANS

2521/22 . . . PLUTO/PETER PAN


2526/27 . . . DUMBO/SWORD IN THE STONE

2531/32 . . . LADY & THE TRAMP/CINDERELLA

TRANSOGRAM CO. INC. NEW YORK N.Y.
MADE IN THE BRITISH CROWN COLONY OF HONG KONG

Transogram WALT DISNEY'S CHARACTER

DONALD DUCK PROJECTOR

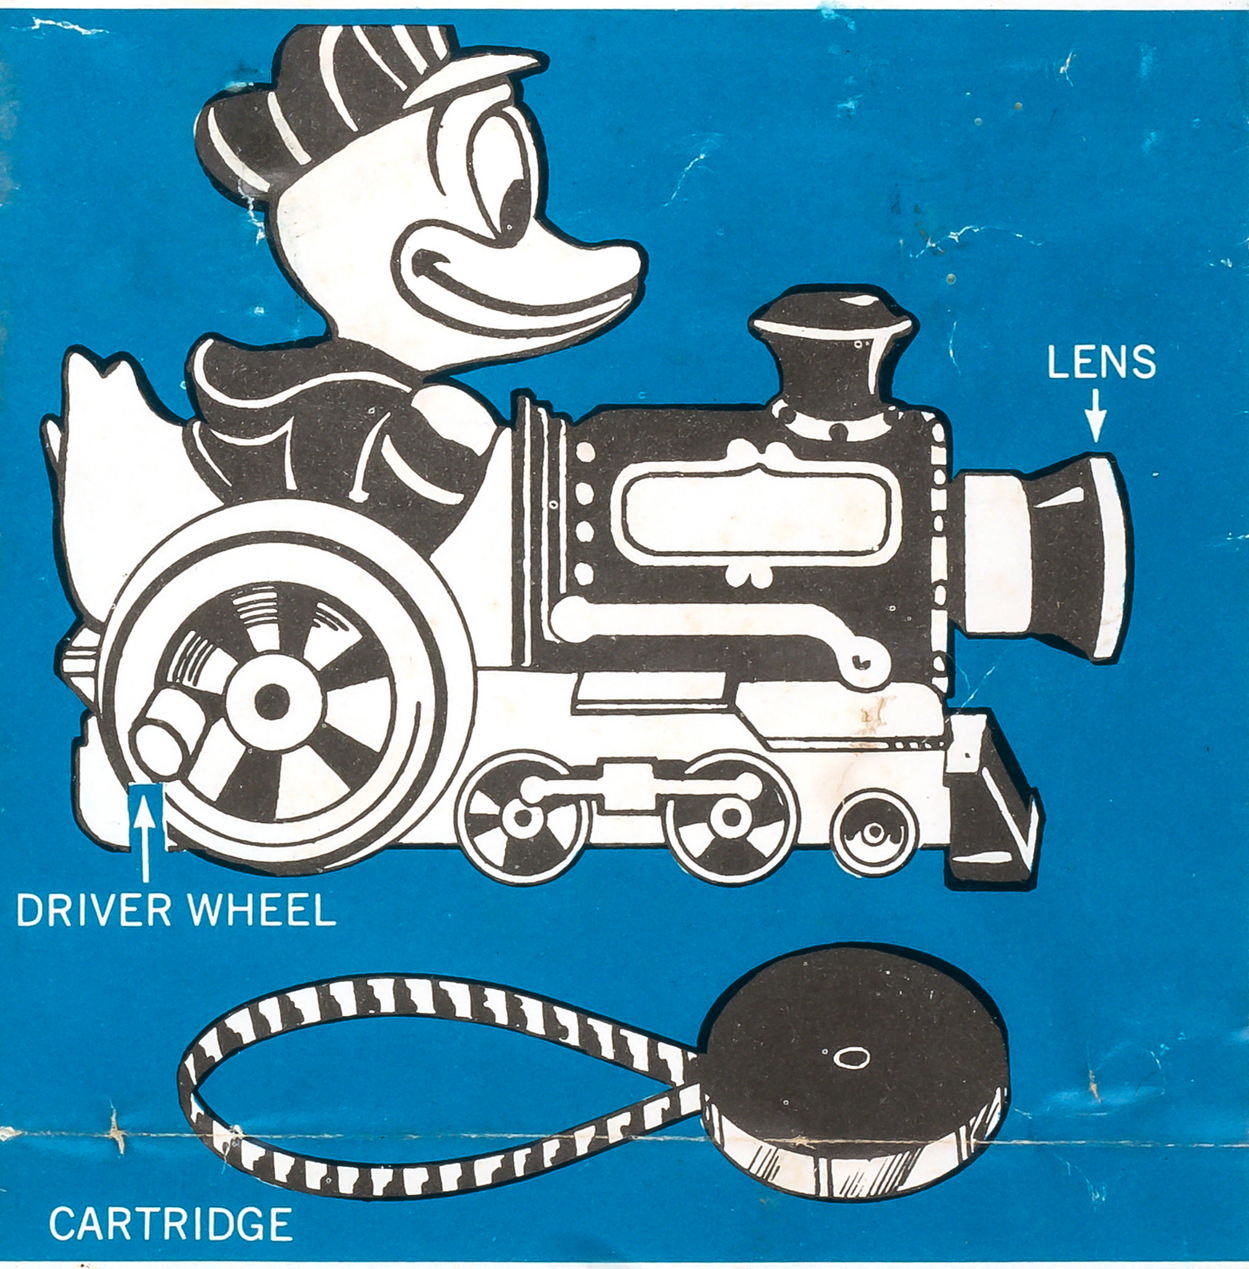


BATTERY

Snap open unit with fingers as shown. Battery compartment is located in right half of unit. Insert two "C" cell batteries as indicated in compartment.



© WALT DISNEY PRODUCTIONS

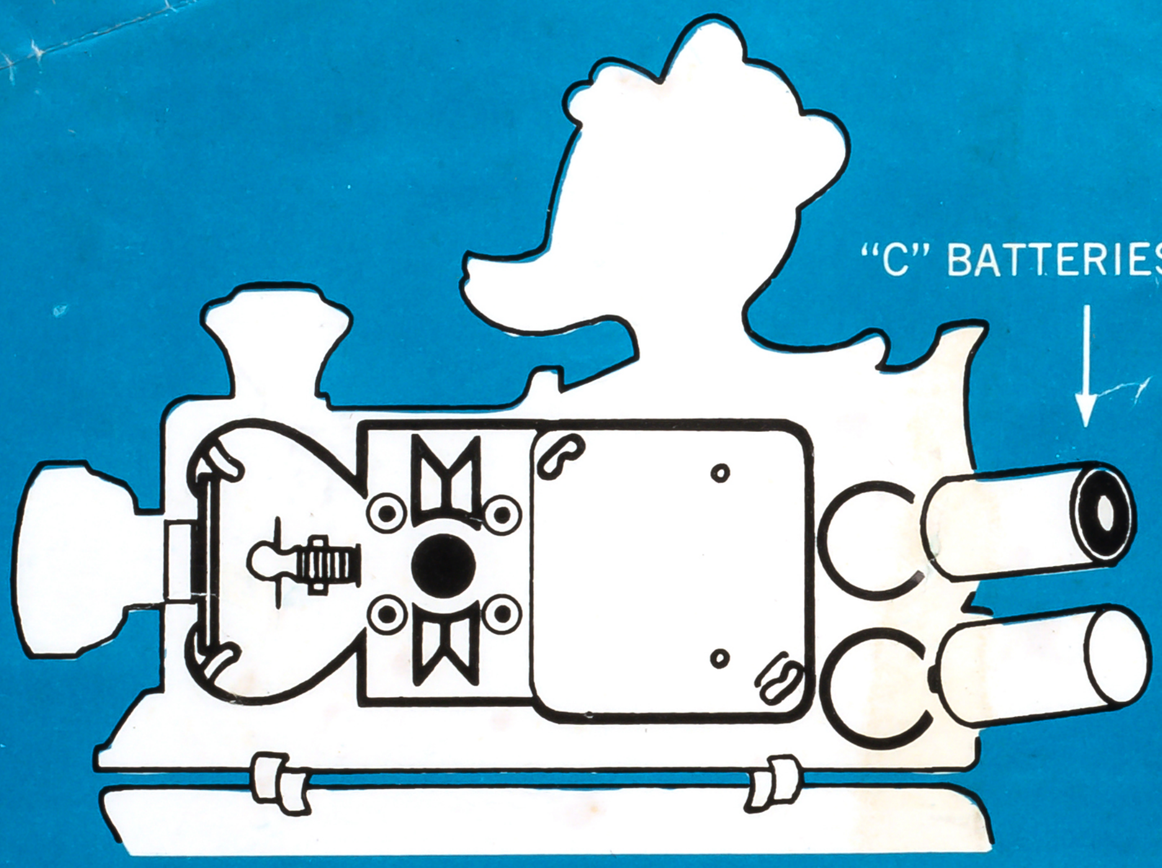

FILM

Each film cartridge has two shows. With the unit open, select the film you want to see, snap in and thread loop as shown. Allowing loop to touch outside walls.


FILM RETAINER CARTRIDGE

Make sure film is firmly up against metal plate.

INSTRUCTIONS FOR INSERTING FILM
(REVISED MODEL)


REVISED PROJECTOR HAS ELIMINATED SLIDING FILM RETAINERS. THEREFORE SIMPLY INSERT FILM AROUND THE WHITE SPROCKET WHEEL. THE FILM WILL AUTOMATICALLY FALL INTO PLACE. FOLLOW STANDARD INSTRUCTION SHEET FOR ALL OTHER PROCEDURES.

CLOSE FILM RETAINERS TO LOCK FILM IN PLACE

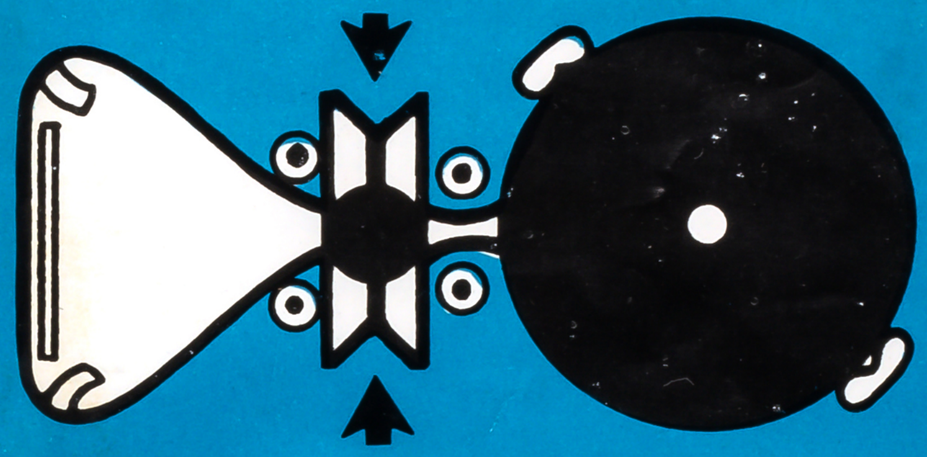


GIVING A SHOW

After loading your film, close the unit.

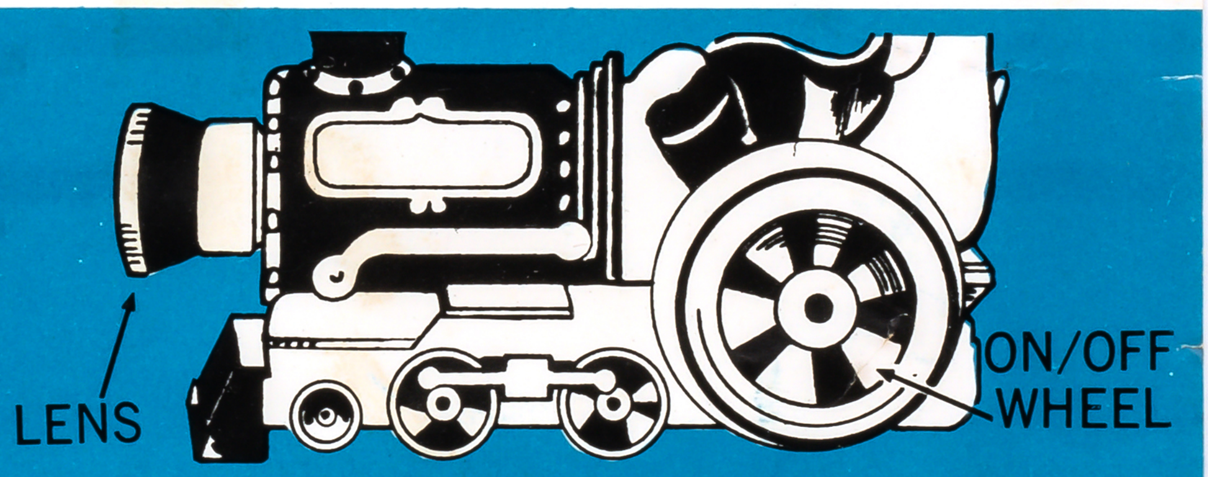

The wheel on Donald's left turns the unit on and off. Move the ON/OFF Wheel forward for **on**, back for **off**. When unit is turned on, focus Lens for sharpest picture by pushing in or pulling out slightly.

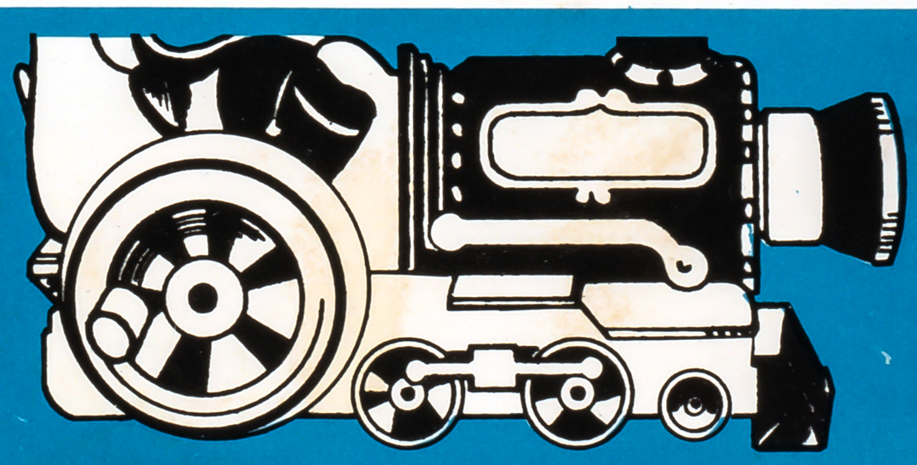

The wheel on Donald's right activates the film. Turn this wheel clockwise to show film.

IMPORTANT

Follow all instruction carefully as directed.